
# **Mounting Instructions**

## Fixed VESA Screen Brackets

052.3000 / 052.4000

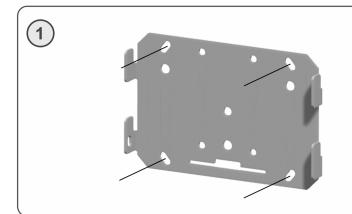

#### Mounting base plate

Mount the basis plate to the wall. Use the four outer mounting holes (170x140mm). Leveling the base plate is possible.

The other mounting positions wil be used in other configurations (ceiling mount or flat screen

# (2)

## (052.3000)






Mount the connecting plate at the back of the screen using the VESA 75 or VESA 100 mounting holes (landscape or portrait).

Use the supplied mounting material.


### Mounting configurations connecting plate

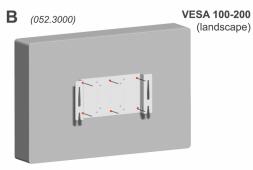

Mount the connecting plate at the back of the screen using the VESA 200-100 mounting holes (landscape). Use the supplied mounting material.

# (052.4000)



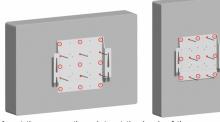


Mount the connecting plate at the back of the screen using the VESA 100-200 mounting holes (landscape or portrait). Use the supplied mounting material.

Instead of the 6 mounting holes in the middle (-) the other holes (0) also can be used (for postitioning bracket out of the middle of the screen).

## **D** (052.4000)

VESA 75 **VESA 100 VESA 200** 

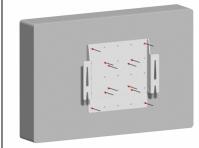


Mount the connecting plate at the back of the screen using the VESA 75, 100 or 200 mounting holes (landscape or portrait).

Use the supplied mounting material.

## **Mounting Instructions**


#### Fixed VESA Screen Bracket

052.3000 / 052.4000

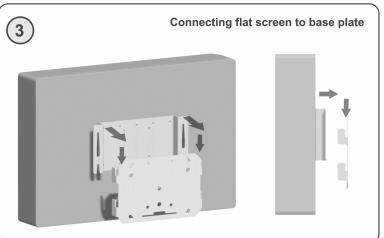

Attach the connecting plate to the base plate.

see example

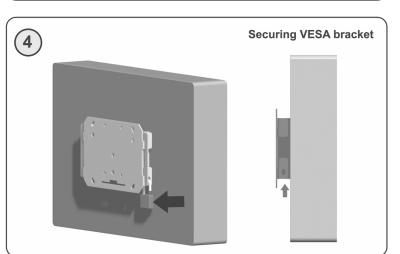

#### Optional:

The VESA screen bracket can be locked with an anti-theft lock on the side of the bracket.

