
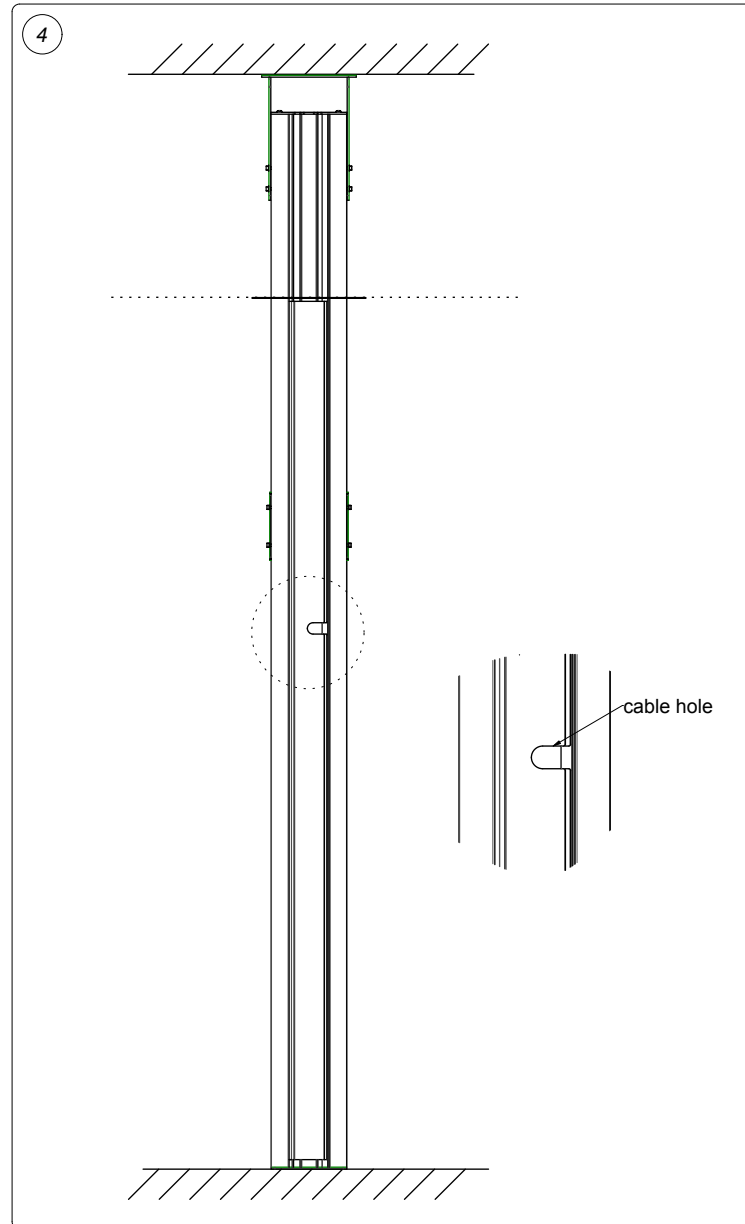


**English**

1. Take the ceiling head of the aluminium column. Place it at the desired position against the ceiling and mark the holes. Drill afterwards the four holes in the ceiling.
2. First slide the aluminium cover plate over the aluminium column and after that the ceiling head.
- 2a. Place the column near the drilled holes in the ceiling and mark the holes on the floor. Drill afterwards the two holes in the floor. Mount the column to the ceiling and the floor.

**Nederlands**

1. Haal de plafondkop van het aluminium statief. Plaats deze tegen de gewenste positie op het plafond en teken de gaten af. Boor vervolgens de vier gaten in het plafond.
2. Schuif als eerste de aluminium afdekplaat en daarna de plafondkop over het aluminium statief.
- 2a. Plaats het statief ter hoogte van de zojuist geboorde gaten en teken de gaten af op de vloer. Boor vervolgens de twee gaten in de vloer. Fixeer de zuil tegen het plafond en de vloer.

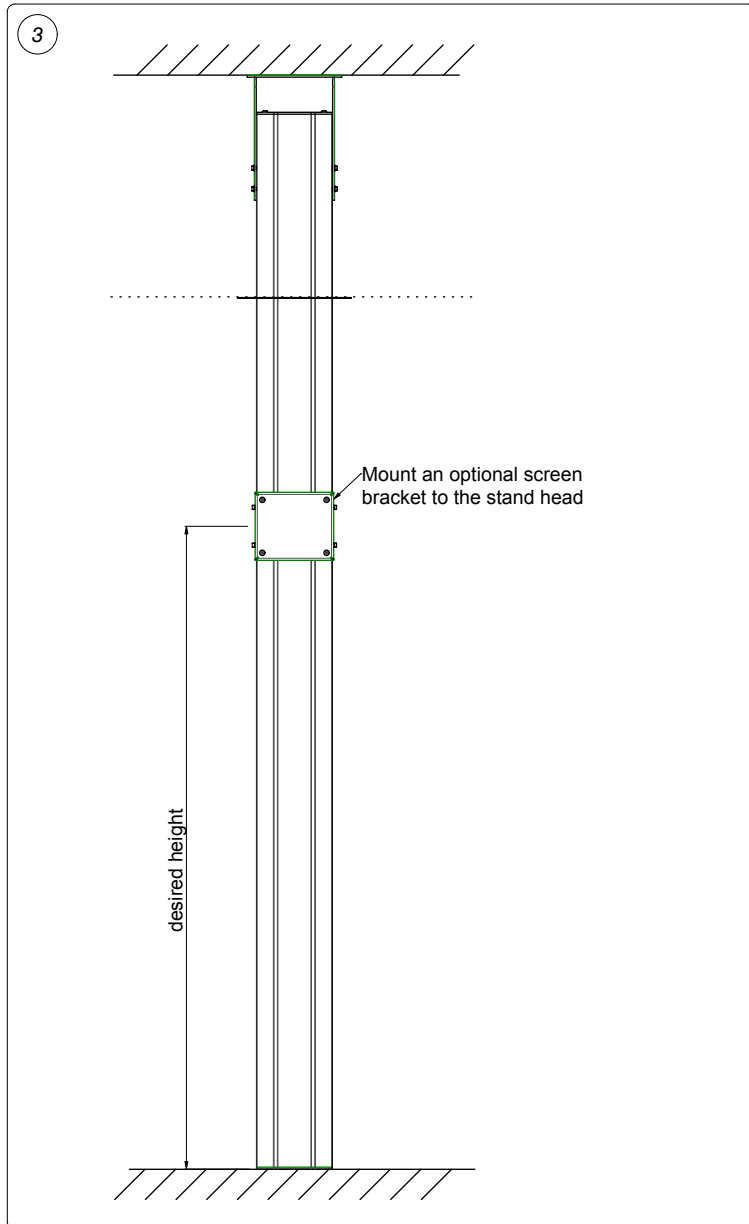

**English**

3. Determine the height of the stand head, fasten it and mount an optional screen mount on the stand head
4. Use the hole in the cable door at the back to run cables from the components through the cable duct of the aluminium column.

**Nederlands**

3. Stel de statiefkop op de gewenste hoogte in en monteer een optionele schermbeugel op de statiefkop.
4. Gebruik het gat in de klep aan de achterzijde om de bekabeling van de te gebruiken componenten in de zuil weg te werken.